



***LifeSize® Video Communications Systems
User Guide***

September 2008

Copyright Notice

©2005 - 2008 LifeSize Communications Inc, and its licensors. All rights reserved.

LifeSize Communications has made every effort to ensure that the information contained in this document is accurate and reliable, but assumes no responsibility for errors or omissions. Information in this document is subject to change without notice. Companies, names, and data used in examples herein are fictitious unless noted. This document contains copyrighted and proprietary information, which is protected by United States copyright laws and international treaty provisions. No part of the document may be reproduced or transmitted, in any form or by any means, electronic or mechanical, for any purpose, without the express written permission from LifeSize Communications.

Trademark Acknowledgments

LifeSize® is the trademark of LifeSize Communications Inc. All other trademarks are the property of their respective owners.

Patent Notice

For patents covering LifeSize® products, refer to <http://www.lifesize.com/support/legal>.

Contacting Customer Support

If you have questions, concerns, or need assistance, contact your LifeSize Channel Partner.

Providing Customer Feedback

LifeSize Communications welcomes your comments regarding our products and services. If you have feedback about this or any LifeSize product, please send it to feedback@lifesize.com. Contact information for LifeSize Communications is as follows:

<i>Method</i>	<i>Address</i>
Internet	http://www.lifesize.com
E-mail	support@lifesize.com
Phone	(877) LIFESIZE or (877) 543-3749 (512) 347-9300
Fax	(512) 347-9301

Welcome to LifeSize Video Communications Systems

LifeSize high definition video communications systems enable anyone with dispersed colleagues and operations to collaborate more clearly and effectively. Each system is designed to make video communication a highly productive, simple, and reliable experience.

This guide explains how to use your LifeSize video communications system to place and manage calls. Related documentation is available from the documentation CD included with the product and from the Support page of www.lifesize.com. Release Notes, technical notes, and technical reference publications are available from the Support page of www.lifesize.com.

System Components

Before using your LifeSize video communications system, familiarize yourself with its components.

Camera

Near end participants and objects in a video conference call are located in the same room as your LifeSize video communications system. Far end participants and objects are in a remote location. The camera captures near end video to send to far end participants in a call. One or more cameras may be connected to the system, depending on the system model and its capabilities.



LifeSize Camera
LifeSize Camera 200



LifeSize Focus

Microphone

A LifeSize system includes a device with one or more microphones for audio input during a call. Depending on the model and optional peripherals purchased, the system may have one or more of the following devices.



LifeSize Phone



LifeSize MicPod



LifeSize Focus

The LifeSize Phone high definition audio conferencing speakerphone is fully integrated with LifeSize video communications systems and doubles as the microphone for a video system. LifeSize Phone provides 16 microphones in a circular array to capture local sound. You can also use the LifeSize Phone to place and hang up calls.

LifeSize MicPod includes a single omni-directional microphone, mute button and mute status LEDs.

LifeSize Focus is a camera that includes two omni-directional microphones.

Note: Only one of these devices can be the active microphone during a call. If more than one type appears to be connected to the system, the **Active Microphone** field in the **System Information** page identifies which device is serving as the active microphone. To access the **System Information** page, refer to “The System Menu” on page 10.

Codec

The LifeSize codec compresses outgoing video and audio content and data, transmits this information to the far end of a call, and decompresses incoming information. You should not need to interact with the codec once it has been properly installed in your environment.



Third Party Display

A third party display connected to the LifeSize codec enables you to access the user interface and view video images during a video call. A second display may be connected to the LifeSize codec if the system supports more than one display.


Remote Control

The LifeSize remote control provides wireless control of all LifeSize video communications system functions and enables you to navigate the user interface, place and receive calls, and control cameras connected to the system. A system includes one of the following remote controls:

Black Remote Control



Silver Remote Control

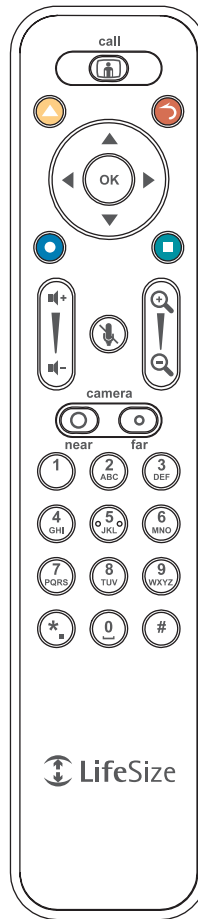

Instructions in this manual for performing tasks with the remote control use the headings **Black Remote Control** and **Silver Remote Control** to identify an instruction that applies only to that remote control model.

Navigating the User Interface

When your LifeSize system is idle, a screen saver appears on the display, or the screen is black. An incoming call or pressing any button on the remote control automatically invokes the system.

Note: Administrators can configure LifeSize systems for use in telepresence rooms in which a conference administrator controls calls from a control panel or where users interact with the system using a connected phone. If telepresence is enabled on your LifeSize system, only an administrator can access the user interface when the system is idle. During a call, you can perform only the following tasks in the user interface:












- Change the behavior of the numeric keys on the remote control from **Touch Tones** to **Presets**. Refer to “Using Camera Presets During a Call” on page 26.
- View call statistics. Refer to “Viewing Call Statistics” on page 30.
- Choose video input with the remote control. Refer to “Changing Video Inputs” on page 27.







The Main Screen

The user interface includes functions available to all users and preferences and functions restricted to administrators with a password.

The main screen includes the following features:

- The top right corner of the screen displays system information such as the system name and video number. This information is hidden during a call.
- Video from the primary input, typically a camera connected to the system, appears in a small window below the system information.
- The center of the screen contains the **REDIAL** list and the **Voice Call** and **Video Call** buttons. From the **REDIAL** list you can place a call by selecting a number from a list of recently dialed numbers. Use the **Voice Call** and **Video Call** buttons to dial a number manually.
- The system status bar is a white bar that appears immediately below the **REDIAL** list. The system status bar indicates system and network status, including the number of voice and video calls, the time and date, or the duration of a call when a call is in progress. When the system is booting, status also appears at the top of the **REDIAL** list to indicate the current state of the system. The following table identifies the icons that can appear in the system status bar.

Icon	Condition
Video 	Indicates the number of video calls in progress. Each orange circle that appears to the right of the video icon represents a video call in progress.
Voice 	Indicates the number of voice calls in progress. Each orange circle that appears to the right of the voice icon represents a voice call in progress.
	Indicates that the communication subsystem is initializing. If this icon reappears after the system has booted, a problem has occurred. Reboot the system.
	Indicates that the system is initializing. When the system is initializing, functionality on the main screen is disabled and no entries appear in the REDIAL list. This icon also appears when a new device is connected to the system after the system boots and disappears when the device is ready. If the icon persists, a problem has occurred and rebooting the system is necessary.
	Indicates that the system does not have an active microphone. Contact your administrator.
	LifeSize Networker connected to the codec is initializing. Most of the main screen elements are not visible. If LifeSize Networker never fully initializes, the red icon persists until either LifeSize Networker or the system is rebooted. Contact your administrator.
	LifeSize Networker connected to the codec has initialized and is attempting to connect to the ISDN network. If this icon persists, contact your administrator.
	Indicates that the phone connected to the system is booting.
Network Status	Identifies the network status, as follows: connected  (green indicator) in progress  (yellow indicator) disconnected  (red indicator)

Icon	Condition
System Overheating	<p>This yellow indicator warns you when the system temperature is approaching the maximum allowed operating temperature above which the system automatically reboots. </p> <p>This red indicator Indicates that the system temperature has exceeded the maximum allowed operating temperature and will automatically reboot in approximately 10 seconds unless the temperature decreases immediately to an acceptable temperature. </p>
SIP server registration status	<p>When SIP is configured as the protocol for placing calls, this indicator identifies the registration status of the LifeSize system with the SIP server as follows:</p> <p>in progress  (yellow indicator)</p> <p>registration failed  (red indicator) Contact your administrator.</p>
H.323 gatekeeper registration status	<p>Indicates the registration status of the LifeSize system with an H.323 gatekeeper as follows:</p> <p>in progress  (yellow indicator)</p> <p>registration failed  (red indicator) Contact your administrator.</p>


- The navigation bar is a grey bar that appears below the system status bar. The navigation bar contains icons that correspond to buttons on the remote control and text that describes the action a button performs. The icons and text change depending on how you use the system. The quick reference card *Getting Started with your LifeSize Video System* shows you how to perform common tasks with the remote control.



Note: Pressing and holding any button except the **OK** button on the remote control may cause the command associated with the button to repeat.

Selecting Objects on the Main Screen

Use the arrow keys on the remote control to navigate the main screen. As you navigate to different parts of the screen, the icons and their descriptions that appear in the navigation bar change to indicate what actions are available for a selected object or screen.

The System Menu

To access the **System Menu** from the main screen, press the  button on the remote control. From the **System Menu** you can do the following:

- View selected configuration and status information about your LifeSize system in the **System Information** pages. Use the  and  buttons on the remote control to navigate the pages.
- Access **User Preferences** from which you can do the following:
 - Change the appearance of the user interface, including the language, background image or color, screen saver and screen saver timeout, system sleep timeout, and the duration of time that the user interface appears after a call connects.
 - Choose the method the system uses for answering calls. For more information, refer to “Answering or Rejecting a Call” on page 19.
 - Adjust settings for audio input and output devices connected to the system. For more information, refer to “Managing Audio” on page 22.
 - Access diagnostic tools to adjust camera settings and video input and reboot the system. For more information, refer to “Troubleshooting” on page 38.

When you select a preference, help text appears at the bottom of the screen to assist you in selecting an option for the preference.

Note: Your administrator can require a password to access these preferences.

- Activate the system do not disturb feature. For more information, refer to “Answering or Rejecting a Call” on page 19.


Controlling Cameras

Become familiar with how to control a camera connected to your system before placing a video call. The **System Information** page identifies the type of camera connected to the system. If the camera type is pan, tilt, and zoom, you can control the camera with the remote control. To prevent far end users from controlling your near end camera during a call, contact your administrator.

Controlling a Near End Camera

To adjust the near end camera when the system is idle, select the camera.



Black Remote Control:

Press the **near/far**  camera button on the remote control.

Silver Remote Control:

Press the **near**  camera button.

Use the following buttons on the remote control to adjust the camera angle:

Remote Control Button	Function
	Left and right arrows pan the camera. Up and down arrows tilt the camera.
	Zoom in and zoom out keys make objects appear closer or farther away.

If you are using LifeSize Room with two cameras, only one camera can be active and capturing video images at any time, even if all cameras are connected to the system. To specify the active camera, refer to “Changing Video Inputs” on page 27. On the **Primary Input** and **Presentation Input** selection screens, the inactive camera appears as a camera icon in a grey selection box. The active camera appears as a selection box with its video image. The blue LED of the active camera is brightly lit when the system is in use. The blue LED of an inactive camera is dimly lit. If you disconnect the active camera, the inactive camera automatically becomes the active camera. Reconnecting the disconnected camera does not change the active camera selection.

Configuring Camera Presets

A camera preset is a predefined camera position that is associated with a numeric key on the remote control. Camera presets enable you to quickly change the position of the near end camera during a call by pressing a single key on the remote control instead of using the arrow and zoom keys. Far end participants see the video image without the delay that is associated with using more than one key to position the camera.

You can configure and use presets in the **Primary Input** and **Presentation Input** screens before placing a call and from any video screen during a call. To configure and use presets during a call, you must first select **Presets** from the **Call Manager** screen. For more information about using presets during a call, refer to “Using Camera Presets During a Call” on page 26.

You can save nine presets. When presets are available for use, icons for the numeric keys (0 through 9) followed by the word **Presets** appear in the navigation bar of the user interface.

Configuring presets before placing a call ensures that you can quickly change the near end camera position during the call. To configure a preset for the near end camera before placing a call, follow these steps:

1. Select the near end camera and adjust its position. Refer to “Controlling a Near End Camera” on page 11.
2. Press and hold a numeric key (1 through 9) on the remote control until you hear a beep. The current position of the camera is associated with the key. **Preset x saved**, where **x** is the numeric key associated with the preset, appears above the status bar.

If you choose a numeric key that already has a preset configured, it is overwritten. An administrator can lock existing presets to prevent them from being overwritten. If an existing preset associated with the key is locked, **Preset x locked** appears on the screen. The 0 key, when used as a preset, always moves the selected camera to the default position and cannot be overwritten.

If you are using LifeSize Room with two cameras and use a preset saved for the second inactive camera, the position of the second camera changes and the second camera becomes the active camera.

3. To test the preset, use the arrow keys to move the camera to a different position, and press the numeric key associated with the preset to move the camera to the preset position. **Preset x**, where **x** is the numeric key associated with the preset, appears above the status bar.

Managing Near End Video Quality

Before you place a call, examine the near end video image from the camera connected to your LifeSize system. If the image flickers, colors appear unbalanced, or the image appears too dark, you may need to adjust the room lighting or camera settings. For more information, refer to “Adjusting Room Lighting” on page 38 and “Camera Issues” on page 38.

Placing a Call

You can place a video or voice call with your LifeSize system in the following ways:

- Select a stored number from the **REDIAL** list on the main screen or from the directory.
- Manually dial a number using the following:
 - **Video Call** or **Voice Call** buttons on the main screen
 - **video** or **voice** keys on the LifeSize Phone if connected to your system




When placing a video call using the remote control or the **video** button on the LifeSize Phone, you can dial either phone numbers or IP addresses. This enables systems inside a corporate network without access to a gateway to call other LifeSize Phones in the network using system IP addresses.

If you enter # as the first character when placing a call, the system attempts to dial the call first as an ISDN number.

Using a comma in a number specifies a one-second pause in the dialing sequence. This may be required, for example, when placing a PSTN call that requires a pause after dialing the first number to obtain an outside line. You can use more than one comma to increase the duration of the pause, if needed.

Placing a Call from the REDIAL List

The **REDIAL** list on the main screen stores up to 15 recently dialed numbers. A scroll bar appears when more than five entries are available for selection. The oldest entry in the list is automatically removed when the system receives a call after the maximum number of entries has been reached.

The last call placed always appears at the top of the list. The entry includes the name of the party called and an icon that indicates whether the number is a voice  or video  number. The entry's number (and bandwidth if the entry is a video number) appears below the list when the entry is selected. If the system receives a call, but does not answer it, the call appears in the **REDIAL** list as a missed call. The  symbol appears next to the name in the entry. The date and time of the missed call appear below the **REDIAL** list when the entry is selected.

To place a call from the **REDIAL** list, use the arrow keys on the remote control to select an entry and press **OK**.

To change the bandwidth for a video call on the **REDIAL** list before placing the call, select **Video Call** on the main screen, press **OK** twice, and use the right arrow key to select the bandwidth list. Change the bandwidth to a setting other than *Auto*.

Note: Selecting *Auto* from the **Video Call** selection before placing a call does not change the bandwidth selection for an entry on the **REDIAL** list that does not have *Auto* as its last called bandwidth.

You can adjust the maximum number of entries that appear in the **REDIAL** list by adjusting the **Maximum Redial Entries** preference in **User Preferences : Calls**.

Note: The *None* option for the **Maximum Redial Entries** preference removes existing entries from the **REDIAL** list and prevents new entries from appearing on the list.


You can also add entries from the **REDIAL** list to the local directory and manually remove entries or lock them to prevent them from being automatically removed when the maximum number of entries is reached. For more information, refer to “Managing the REDIAL List” on page 33.

Placing a Call from the Directory




The directory stores a list of names and numbers from which you can place calls. The directory includes three subdirectories: the local, corporate, and meetings directories. An entry in the local or corporate directories contains dialing information for a single device. An entry in the meetings directory contains dialing information for two or more devices. When you place a call using an entry in the meetings directory, the system dials all the devices in the entry.

Entries in the local and meetings directories are stored on the system and can be modified. The corporate directory is read only and managed by your administrator.


To place a call from the directory, follow these steps:

1. From the main screen, press the  button on the remote control to access the directory.
2. Use the arrow keys to select either the **Local**, **Corporate**, or **Meetings** directory, and press **OK**.
3. Use the arrow keys on the remote control to select the entry that you wish to dial.

You can browse the directory using either the alphabetical or hierarchical method. When you use the alphabetical method, the entries appear in alphabetical order and you can select an alphabet group in the **Browse** column to quickly navigate to an entry.

Hierarchies are predefined organizational units similar to folders or directories on a computer system. You can place an entry into a hierarchy when you create the entry or at any time by editing the **Hierarchy** field when editing the entry. For more information about creating hierarchies, refer to “Managing the Directory” on page 35. Using the hierarchical method, you can select a hierarchy in the **Browse** column to locate an entry. To move down one level in **Browse**, press **OK**. To move up one level, press the  button. You can also use the  and  keys on the remote control to move up or down a page of entries when an entry is selected.

4. Press **OK** on the remote control to place the call.

Note: If an entry in the local or corporate directory has more than one number, the  symbol appears in the **NUMBERS** column. Press **OK** and select the number you wish to call from the menu that appears. Press **OK** to place the call.

You can also add, remove, or edit entries in the directory. For more information, refer to “Managing the Directory” on page 35.


Manually Dialing a Number from the Main Screen

Use the **Video Call** and **Voice Call** selections on the main screen to dial a video or voice number manually using the remote control.



Manually Dialing a Video Number

To dial a video number manually from the main screen, follow these steps:


1. Use the arrow keys on the remote control to select **Video Call** and press **OK**.
2. Enter the number you wish to call. The last manually entered number appears by default. To edit the number, use the following keys:

- The  button changes the text entry method (indicated at the bottom of the screen).

Note: The **0x1a** option enables you to enter an IPv6 address when your LifeSize system is connected to an IPv6 network. If IPv6 addressing is enabled on your LifeSize system, the IPv6 address of the system appears on the **System Information** page in the **System Menu**. If you enter an IPv6 address, the system you are calling must support IPv6 addressing for the call to connect.




- The  button behaves as backspace.
- The  button displays the keyboard from which you can enter alphabetical characters. Use the arrow keys to navigate to the character you wish to enter and press **OK**.

Press **OK** to exit the field.

3. *Optional:* Navigate to the list that appears next to the entry box for numbers and choose a value for the maximum bandwidth for the call. Press **OK** to access the list, use the arrow keys to select a value, and press **OK** again to save your selection.
4. Press the **call**  button to dial the number.

Manually Dialing a Voice Number

To dial a voice number manually from the main screen, follow these steps:

1. Use the arrow keys on the remote control to select **Voice Call** and press **OK**.
2. Enter the number you wish to call. The last manually entered number appears in this field by default. To edit the number, use the following keys:
 - The  button changes the text entry method (indicated at the bottom of the screen).
 - The  button behaves as backspace.
 - The  button displays the keyboard from which you can enter alphabetical characters. Use the arrow keys to navigate to the character you wish to enter and press **OK**.

Using a comma in a number specifies a one-second pause in the dialing sequence. This may be required, for example, when placing a PSTN call that requires a pause after dialing the first number to obtain an outside line.

3. Press **call**  to place the call.

Manually Dialing a Number with LifeSize Phone

When LifeSize Phone is connected to your LifeSize video conferencing system, you can manually dial a voice or video call using the keys on the phone keypad. To place a call, press the **voice** or **video** keys and enter the number using the numeric keys.


When placing a call using the **voice** button on the LifeSize Phone and voice dialing is set to touch tone (or pulse on LifeSize Room, LifeSize Team, and LifeSize Team MP), you can dial only phone numbers using PSTN connectivity. When voice dialing is set to VoIP, you can dial IP addresses as well as phone numbers.

Including Multiple Sites in Calls


If your system is hosting a conference call (all callers are connecting to your system), you can add participants to an existing call at any time up to the maximum connections allowed for the system. You can add a second participant while the first call is connecting; you do not need to wait for the first call to connect. If you attempt to add a participant after the system limit has been reached, the message **Maximum Calls Reached** appears in the **Call Status** window.

To add participants to an existing call, follow these steps:

1. **Black Remote Control:**

Press the  button to return to the main screen to add a new caller.

Silver Remote Control:

Press the  button to return to the main screen to add a new caller.

2. Do one of the following:

- Select a number from the **REDIAL** list and press **OK**. An orange LED indicator appears in the **REDIAL** list to the left of the voice or video numbers currently in a call.
- Select a number from the directory. Refer to “Placing a Call from the Directory” on page 15.
- Dial a number manually using the **Voice Call** or **Video Call** selections. Refer to “Manually Dialing a Number from the Main Screen” on page 16.
- Press the **add** key on the phone keypad and enter the new number to call. Press the **voice** key or the **video** key on the phone keypad, depending on the type of call you are placing.

Note: If a call connects using PSTN connectivity, you must use the remote control to add calls.

Answering or Rejecting a Call

You can configure your system to automatically answer incoming calls by setting preferences in **User Preferences : Calls** as follows:

- **Auto Answer**—If set to *Enabled*, the system automatically answers the first incoming call. If set to *Disabled* (the default), you must manually answer incoming calls.

If your system is configured for answering calls manually, choose one of the following options when an incoming call arrives:

- Select **Answer** and press **OK** to accept the call.
- Select **Ignore** and press **OK** to reject the call.

Note: When **Auto Answer** is set to *Enabled*, the system answers a PSTN call only if another call is already connected.

- **Auto Answer Mute**—If set to *Enabled* (the default), and the **Auto Answer** preference is set to *Enabled*, the system is muted when a call connects.
- **Auto Answer Multiway Call**—If set to *Enabled* (the default), the system automatically answers incoming calls after the first call has connected. The system beeps to indicate when a new call connects.

If **Auto Answer Multiway Call** is set to *Enabled*, the **New Call Automatically Answered** dialog appears when video is not available from the incoming call because of any of the following conditions:

- The second or subsequent incoming call is a voice call. The name and number of the added voice caller appears in the dialog.
- The system supports more than four video participants and a fifth or subsequent video participant joins the call. LifeSize systems that support multiway calls can show video images from a maximum of four video participants.
- The system supports and is configured to show video only from the participant currently speaking or from the last speaker if your site is the current speaker.

Select **Hang Up** and press **OK** to hang up the call. If you ignore the dialog, the system accepts the call.

Enabling Do Not Disturb During Calls

If you receive an incoming call while you are in another call and **Auto Answer Multiway Call** is set to *Disabled*, you can choose **Do Not Disturb** which ignores the incoming call and prevents any other calls from interrupting for the duration of the call. The caller hears a busy signal. Calls missed while the do not disturb feature is enabled show in the **REDIAL** list on the main screen.


Regardless of the setting for the **Auto Answer Multiway Call** preference, at any time during a call you can enable the do not disturb feature from any call screen by doing the following:

1. Press **OK** on the remote control. The **Call Manager** appears.
2. Use the arrow keys to navigate to **Do Not Disturb**.
3. Press **OK**.

Using System Do Not Disturb

You can enable the system do not disturb feature to show only the background image of the main screen with the status and navigation bars and a system do not disturb message. When the system do not disturb feature is enabled, the system responds only to the volume control buttons and the **OK** button on the remote control. Callers hear a busy signal and missed calls appear in the **REDIAL** list. Consider using this feature, for example, if you are using the meeting room a purpose other than a video conference and do not wish to be disturbed by incoming calls.

To enable this feature, follow these steps:

1. From the main screen, access the system menu by pressing the  button on the remote control.
2. Use the down arrow key to select **Do Not Disturb** on the **System Menu**.
3. Click **OK**.

A dialog appears indicating that the system do not disturb feature is enabled. Press **OK** to return the system to normal operation.

Managing a Call









During a call, you can view information about the status of the call and the identity of connected callers. You can also manage audio output and video images, control cameras, select input to appear in a display, and initiate a presentation.

Call Status


When you place a call with your LifeSize system, a **Call Status** dialog appears. The **Call Status** dialog shows the number or IP address that you are attempting to call and the status of the call (for example, **dialing**, **ringing**, **connecting**, **answered**, or **unavailable**).

Caller ID

When a far end system in a video call answers your incoming call, video from the far end appears in your display. In the upper-left corner of the far video image, the caller ID (phone number or IP address) of the far end system appears. One or more of the following icons may appear next to the caller ID to represent information about the call.

Icon	Description
	Video call.
	Voice call.
	Microphones are muted on the near system.
	Microphones are muted on the far end system.
	A voice call that is encrypted. Note: In the Call Status, Call Manager list, and Call Statistics list, the following icon appears: 
	A video call that is encrypted. Note: In the Call Status, Call Manager list, and Call Statistics list, the following icon appears: 

Hiding or Showing User Interface Elements


By default, the system information, status bar, and navigation bar fade from the screen after a call has been connected for 10 seconds. This interval resets after any interaction with the system. You can adjust the duration of the fade out interval by adjusting the **Fade Out Timeout** preference in **User Preferences : Appearance**. To hide or show these user interface elements at any time during a call, press the  button.

Note: The user interface does not hide if the system is overheating. System overheating icons appear in the status bar. Refer to “The Main Screen” on page 7 for more information about the system overheating icons.


Managing Audio

You can identify the video caller who is speaking in the call, adjust the volume of the audio, and mute audio inputs.

Identifying the Dominant Speaker

When a video participant in a call is speaking, the dominant speaker icon  appears in the display in the video image from that participant.




Adjusting Volume

To adjust the volume in a call, use the  button on the remote control or on the phone. You can also adjust the volume of other inputs and the treble and bass for line out by adjusting preferences in **User Preferences : Audio**.

Volume preferences for audio inputs appear with an audio meter next to the slider. The audio meter expands below the slider when you select the slider and then press **OK** on the remote control. Use the audio meter to determine the best volume setting. For example, if you are adjusting the volume of the active microphone, position yourself the same distance from the microphone as participants would be in the room during a video conference. Speak and observe the color of the bars that appear in the audio meter. Green bars indicate an acceptable setting at normal speaking volume. Yellow bars are acceptable if you are shouting or speaking loudly. Avoid settings that produce red bars in the audio meter.

When the user interface is visible during a call, a volume meter for the active microphone appears in the status bar when you adjust the volume using the remote control and in the near video image.

Muting Audio Inputs

By default, when you press the  button on the remote control, LifeSize Phone, or LifeSize MicPod, the system mutes all audio inputs, including the microphone and audio from any devices connected to the system that may be sending audio in a presentation, such as a DVD player connected to the system. A red mute icon  appears in the display. Red LEDs on LifeSize Phone or LifeSize MicPod indicate that these microphones are muted. Pressing the  button again re-activates the audio inputs.

An administrator can configure the system to mute only the microphone when you press the mute button so that devices connected to the system such as a personal computer or a DVD player continue to send audio during a presentation while the microphone is muted. The **Audio Mute** field in the **System Information** page indicates which devices, either all audio inputs or only the active microphone, are muted when you press the mute button. To access the System Information page, refer to “The System Menu” on page 10.

Managing PIP

Your display shows the far-end and near-end video conferencing sites in addition to the menus and video images from connected video sources.

Picture-In-Picture (PIP) is a smaller window placed in one of the corners of the call screen. This second image is placed on top of the main image and always displays the primary (near) input by default. You can change the default setting so that PIP never appears or always appears by adjusting the **User Preferences : Appearance : Picture in Picture** preference. To change the primary input, refer to “Changing Video Inputs” on page 27.

Managing Video Layout


During a call, video images from connected callers appear in your display. You can change the screen layout of near and far end video images that appear in the display.

Understanding Screen Layouts

Screen layouts appear as one of the following types:

- A far end participant appears as the largest video image.
- Your site (the near end participant) appears as the largest video image.
- All video images from all participants are the same size.
- A presentation appears as the largest video image (when a presentation is in progress).

LifeSize systems that support multiway video calls can show video from a maximum of four callers: three far end participants and the near end participant. During a multiway video call, if you choose a screen layout that assigns video from a far end participant to the largest window in the screen layout, video from the far end participant who is currently speaking appears in the largest window. Near end video does not change location when a participant at the near end (your site) is the current speaker.


If you choose a screen layout that shows all video images the same size, only the dominant speaker icon  moves to indicate which participant is currently speaking.

If your LifeSize system supports more than four video participants in a call, by default the video image from a fifth or sixth far end participant appears in the display only when that participant becomes the current speaker and replaces the video image of the earliest of the last three far end speakers. If an administrator has configured the system to show video only from the last speaker in the call, then only the video image from the participant who is currently speaking appears in the display. If a participant at your site is currently speaking, video from the last speaker appears in your display.

Changing the Screen Layout of Video Images


To change the screen layout, do the following:

- **Black Remote Control:**

Press the screen layout  button.

- **Silver Remote Control:**

Press the **call**  button.

If you are using the silver remote control, you must be controlling the near camera to select a new screen layout. By default, the near camera is selected during a call. An orange camera icon  appears in the user interface when the near camera is selected.



The number of the selected screen layout (x) and the total number of screen layouts that are available (y) appear in the center of the screen above the status bar as x/y . The total number of screen layouts that are available depends on the number of connected callers, whether a single display or a dual display is used, and whether or not a presentation is being viewed. Continue to press the screen layout button to show all available screen layouts. You can change screen layouts with single and dual monitor configurations and while sending or receiving presentations. Refer to “Initiating a Presentation” on page 29 for more information about presentations.

If your LifeSize system is a participant in a multiway call with another LifeSize system that is hosting the call, you can manage the layout of video from all participants in the call. In this case, the same number and type of screen layouts that are available to the LifeSize system hosting the call are available to you for selection. Both your system and the LifeSize system that is hosting the call must be installed with software release v3.0 or later. For the dominant speaker icon and appearance of the far end participant in the largest video window in a layout to function properly when using this feature, your system and the LifeSize system that is hosting the call must be installed with software release v4.0.

Controlling a Far End Camera




You can control a far end camera during a video conference in the same way you control a near end camera if the far end camera is enabled properly.


If your LifeSize system is participating in a multiway video call hosted by another LifeSize system, you can also control the cameras of all participants in the call, not just the camera of the system hosting the call. Both your system and the LifeSize system hosting the call must be installed with software release v3.0 or later for this feature to function properly.

During a video call, a camera icon appears in the video image of the participant whose camera you are controlling when the user interface is visible. An orange camera icon  indicates control of the primary (near) input. A blue camera icon  in a far end video image indicates control of the far end camera. By default, the near camera is selected.



To select a far end camera to control, do the following from any call screen:


Black Remote Control:

Press the **near/far**  camera button on the remote control. The blue camera icon  appears in the first far end video image in the call. If more than one video participant is connected, continue to press the **near/far**  camera button until the blue camera icon appears in the far end video image of the participant whose camera you wish to control.

After you select the far end participant whose camera you wish to control, you can choose the far end input device to control by pressing the **input**  button on the remote control. A menu of the input devices that are available for selection appears. Use the arrow keys on the remote control to select a device and then press **OK**.

Silver Remote Control:

Press the **far**  camera button. The blue camera icon appears in the first far end video image in the call. If more than one video participant is connected, press the **call**  button to select a different far end participant. The blue camera icon moves to the video image of the next far end participant in the call.

After you select the far end participant whose camera you wish to control, you can choose the far end input device to control by pressing the **far**  camera button. A menu of the input devices that are available for selection appears. Use the arrow keys on the remote control to select a device and then press **OK**.

Using Camera Presets During a Call

You can configure a camera preset before placing a call or during a call. To configure a camera preset on the near camera before placing a call, refer to “Configuring Camera Presets” on page 12. To configure a camera preset during a call, ensure that the numeric keys are functioning as presets as indicated in the following steps, select the camera you wish to control, and then configure the preset.


To use a camera preset during a call, follow these steps:

1. In the navigation bar from any call screen, **Presets** must appear to the right of the numeric keys icons in the navigation bar to indicate that the numeric keys on the remote control are functioning as presets. If **Touch Tones** appears instead, change the function of the keys to **Presets** by doing the following:

- **Black Remote Control:**

Press the  button.

- **Silver Remote Control:**

Access the **Call Manager** by pressing **OK**. Use the arrow keys to select **Presets** and then press the  button to close the **Call Manager**.

The **Presets** label appears next to the numeric key icons in the navigation bar of the user interface.

Note: To use presets during a call, you must use the remote control.

2. To use a preset, press the numeric key on the remote control that represents the preset you wish to use. **Preset x**, where *x* is the numeric key associated with the preset, appears on the screen.

If you configured a preset for a far end camera of a participant in the call, you must select the far end camera to use the preset. Refer to “Controlling a Far End Camera” on page 25.

Note: The numeric keys work as presets during a call only when you are in a call screen.

Changing Video Inputs

LifeSize video communications systems support two video streams. The primary input is the main video stream that you send to the far side during a call usually from a camera connected to the system. The presentation input is the video you send when you want to show a presentation to the far side, such as a spreadsheet or a slide show on a personal or laptop computer connected to the system. You can change the primary and presentation inputs when the system is idle or during a call. Refer to “Initiating a Presentation” on page 29 for more information about presentations.

If you are using two cameras with a LifeSize Room system, only one camera can be active and capturing video images at any time, even if both are connected to the system.

Changing the Primary Input

- When the system is idle and the main screen appears in the display:

Black Remote Control:

- a. Press **input**  + .

The **Primary Input** selection dialog appears and contains small representations of the available input sources.

- b. Use the arrow keys to select a new input and then press **OK**.

Silver Remote Control:

- a. Press **near**  + .

The **Primary Input** selection dialog appears and contains small representations of the available input sources.

- b. Use the arrow keys to select a new primary input and then press **OK**.

- During a call from any call screen:

Black Remote Control:

- a. Press the **input**  button.

The **Primary Input** selection dialog appears and contains small representations of the available input sources.

- b. Use the arrow keys to select a primary input and then press **OK**.

Silver Remote Control:

- a. Press the **near**  button.


The **Primary Input** selection dialog appears and contains small representations of the available input sources.


- b. Use the arrow keys to select a new primary input and then press OK.

Changing the Presentation Input

- When the system is idle and the main screen appears in the display:

Black Remote Control:

- a. Press the **input**  button on the remote control.

- b. Press the  button to show the presentation input screen.

- c. Press the **input**  button.


The **Presentation Input** selection dialog appears and contains small representations of the available input sources.

- d. Use the arrow keys to select a presentation input and then press **OK**.

The default presentation input is named PC by default. Your administrator may have changed the name to identify a different default device or a name that is more meaningful in your organization.

Silver Remote Control:

- a. Press the **near**  button.

- b. Press the  button to show the presentation input screen.

- c. Press the **near**  button.

The **Presentation Input** selection dialog appears and contains small representations of the available input sources.

- d. Use the arrow keys to select a new primary input and then press OK.

The default presentation input is named PC by default. Your administrator may have changed the name to identify a different default device or a name that is more meaningful in your organization.

-
- During a call from any call screen:

Black Remote Control:

- a. Press **input**  + .

The **Presentation Input** selection dialog appears and contains small representations of the available input sources.

- b. Use the arrow keys to select a new input and then press **OK**.

Silver Remote Control:

- a. Press **near**  + .

The **Presentation Input** selection dialog appears and contains small representations of the available input sources.

- b. Use the arrow keys to select a new presentation input and then press **OK**.

Initiating a Presentation





LifeSize systems include support for sharing data from the presentation input (typically a personal computer connected to the codec) while simultaneously showing video from the primary input. This enables you to view a live presenter and the content at the same time.

Note: If you are using LifeSize Room or LifeSize Team MP in a four-way call, only the system that is hosting the conference call can initiate a presentation. In calls with fewer sites connected, any site can initiate a presentation. If you are using LifeSize Room 200 or LifeSize Team 200 in a four-way call, any site can initiate a presentation.



If you wish to change the primary and secondary inputs you can do so either prior to the call or at any time during a call. Refer to “Changing Video Inputs” on page 27.



By default, support for presentations is enabled on a LifeSize system. During a call, if you connect a video input device other than a LifeSize Camera or LifeSize Focus to a video input connector on the codec, such as connecting a laptop to the system, a presentation starts automatically. The presentation stops automatically if the video input device is disconnected from the system.


An administrator can disable support for presentations, disable automatic start of a presentation when a video input device is connected, or both.

You can show presentation video even if presentations are disabled on your system or another system in a call. During a call,  **Start presentation** appears in the navigation bar if systems participating in the call support presentations. If support for presentations is disabled on the system, or if all other systems in the call do not support presentations, the  button appears in the navigation bar followed by the name of the presentation input currently selected for the system (typically **PC** for a personal computer connected to the codec). Pressing the  button in this case, swaps the primary and presentation inputs. The system sends video from the presentation input as the primary input. Pressing the  button again or ending the call, returns the inputs to their original selections.

If support for presentations is enabled, but a presentation does not start automatically when a video input device is connected to the system, follow these steps to start or stop a presentation manually:


1. During a call,  **Start presentation** appears in the navigation bar of the user interface if systems participating in the call support presentations. Press the  button to start the presentation. A message appears indicating that the presentation is starting. The far end can also start a presentation, which halts the current presentation at the near end. The following indicators appear in the user interface when you send or receive a presentation:

	<p>The receiving presentation indicator appears on top of the presentation video that you are receiving from a far end participant.</p>
	<p>The sending presentation indicator appears on top of the presentation video that you are sending.</p>


2. Press the  **Stop presentation** button again to stop the presentation.

Viewing Call Statistics

To view statistical information about a call, follow these steps:


1. During a call, press the  button.
2. Audio and video statistics for the current call display on the screen.

Information such as bandwidth, packet rate, jitter, packet loss, resolution, and duration of individual calls are included in the call statistics.




3. To hide the statistics, press the  button again. Statistics automatically refresh every 5 seconds and hide after 5 minutes.

Ending a Call

You can end a call using any of the following options:

- **hang up**  button on the black remote control
- **Call Manager** dialog
- **REDIAL** list
- LifeSize Phone

Ending a Call with the Black Remote Control

If you are using the black LifeSize remote control, you can end a two-way call by pressing the **hang up**  button. To end a multiway call, press **hang up**  + .

Ending a Call from the Call Manager


To hang up a call from the **Call Manager** dialog, follow these steps:

1. From any call screen, press **OK**.
The **Call Manager** dialog appears.
2. Choose one of the following:
 - To hang up a single call, press **OK** again to end the call.
 - To hang up any individual caller in a multiway call, use the arrow keys on the remote control to select the caller, and press **OK**.
Note: If your LifeSize system is participating in a multiway video call hosted by another LifeSize system, all callers appear in the Call Manager rather than only the system hosting the call. You can only hang up your connection to the system hosting the call. All callers appear in the Call Manager only if your system and the LifeSize system hosting the call are installed with software release v3.0 or later.
 - To hang up all callers in a multiway call, use the arrow keys on the remote control to select **Hang Up All**. Press **OK** to terminate the connection with all callers.
 - To hang up only voice callers or only video callers, use the arrow keys on the remote control to select **Hang Up Voice** or **Hang Up Video**. Press **OK** to terminate the connection with all voice or video callers. This option only appears when both voice and video calls are in progress.


Ending a Call from the REDIAL List

To hang up a call from the **REDIAL** list, follow these steps:

1. **Black Remote Control:**

Press the  button to return to the main screen.

Silver Remote Control:

Press the  button to return to the main screen.


2. On the **REDIAL** list, select the call that you wish to hang up. An orange LED indicator appears in the **REDIAL** list to the left of the voice or video numbers currently in a call.
3. Press **OK**.

Ending a Call from LifeSize Phone


To hang up a call from the LifeSize Phone, press the activated **voice** or **video** button.

Using a Single Display for Local Presentations

If your LifeSize system has a single display and you wish to show data locally from a device connected to a video input when the system is idle or in a voice call, access **User Preferences : Appearance**. Set the **Screen Saver** preference to the desired input.

The  key followed by the name of the input appears in the navigation bar on the main screen when the following occurs:

- The system is idle or in a voice call with the voice call screen appearing in the display.
- A device connected to the selected input is sending data to the system.

Pressing the  key shows the data from the input selected for the **Screen Saver** preference. Pressing any key returns you to the main screen.


When the screen saver activates and when the system is asleep, data from the input appears in the display. The display is black if the device connected to the input is not sending data to the system.

Managing the REDIAL List

You can perform the following tasks to manage the **REDIAL** list:



- Lock an entry to prevent it from being removed automatically from the list.
- Unlock a locked entry.
- Remove an entry.
- Add an entry to the local directory.
- Adjust the maximum number of entries that can appear.

Locking and Unlocking Entries in the REDIAL List

You can lock and unlock entries in the **REDIAL** list. Locking an entry prevents it from being removed after the maximum number of entries in the list has been reached. The lock symbol  appears next to the name in the entry when the entry is selected.



Note: Locking an entry does not prevent it from being removed from the list manually.
Refer to “Removing an Entry from the REDIAL List” on page 34.

To lock or unlock an entry in the **REDIAL** list, follow these steps:

1. Using the arrow keys on the remote control, select the entry you wish to lock or unlock.
2. **Black Remote Control:**
Press the  button.
Silver Remote Control:
Press the  button.
3. Select **Lock** (or **Unlock** if the entry is locked) from the menu, and press **OK**.



Removing an Entry from the REDIAL List

To remove an entry from the **REDIAL** list, follow these steps:

1. Using the arrow keys on the remote control, select the entry you wish to remove.
2. **Black Remote Control:**
Press the  button.
Silver Remote Control:
Press the  button.
3. Select **Remove** from the menu, and press **OK**.

Adding a REDIAL List Entry to the Directory

You can add an entry from the **REDIAL** list to the local directory.






1. Using the arrow keys on the remote control, select the entry you wish to add to the directory.
2. **Black Remote Control:**
Press the  button.
Silver Remote Control:
Press the  button.
3. Select **Save** on the menu and press **OK**.
4. Press **OK** again to close the confirmation dialog.

Managing the Directory

You can manage the local and meetings directories by adding, removing, or editing entries.

Adding an Entry to the Local or Meetings Directory

You can create up to 1000 entries in the local directory and 100 entries in the meetings directory. To add an entry to the local or meetings directories, follow these steps:

1. Access the directory by pressing the  button from the main screen.
2. Using the arrow keys, select either the **Local** or **Meetings** directory.
3. Select the **Add New Entry** button and press **OK**.
4. Do one of the following:
 - a. To add an entry to the local directory, use the arrow keys to select fields in the **New Directory Entry** screen. Press **OK** to enter a value in a selected field. Enter a system name, video and voice numbers, and IP address or ISDN numbers. If necessary, press the  button to change the method of text entry for text fields or press  to access the keyboard. After entering a value, hide the keyboard (if you used it to enter the value) and press **OK** to exit the field.
 - b. To add an entry to the meetings directory, select **Meeting Name** and press **OK**. Enter a name for the meeting. If necessary, press the  button to change the text entry method for text fields or press  to access the keyboard. After entering a value, hide the keyboard (if you used it to enter the value) and press **OK** to exit the field.

Select the directory (**Local**, **Corporate**, or **Both**) from which you wish to choose entries to add to the meeting.

In the **Available Entries** column, select an entry to add to the **Participants** column and press **OK**.

If the entry has more than one number, a submenu that contains each number appears. Select the number on the submenu that you wish to dial for the meeting and press **OK**. Select an entry from the **Available Entries** column for each participant that you wish to add to the meeting entry.




-
5. If a hierarchy has been predefined for the local and meetings directories, in the **Hierarchy** field, enter the path to the location in the hierarchy in which to place the entry. Hierarchies can be defined, for example, by location or department. You must identify the full path (separated by commas) of a predefined hierarchy in which to add an entry prior to completing the new entry screen. If you leave the **Hierarchy** field empty, the new entry is inserted at the top of the hierarchy (if defined) or is grouped alphabetically.

For example, suppose your administrator defined a hierarchy by location where Home Office is the top of the hierarchy, and Sales Office 1 and Sales Office 2 are at the next level below the Home Office. To place an entry in Sales Office 2, the value for **Hierarchy** is *Home Office, Sales Office 2*.

6. When you have completed the fields, do one of the following:
 - a. To add the entry to the local directory, select **Add Entry** and press **OK**.
 - b. To add the entry to the meetings directory, select **Add Meeting** and press **OK**.




Copying an Entry from the Corporate to Local Directory

You can copy an entry from the corporate directory to the local directory.

1. Access the directory by pressing the  button from the main screen.
2. Select the **Corporate** directory.
3. Select the entry you wish to copy to the local directory.
4. **Black Remote Control:**
Press the  button.
4. **Silver Remote Control:**
Press the  button.
5. Select **Copy to local** and press **OK**.
6. Press **OK** to save the entry.




Removing an Entry from the Local or Meetings Directories

You can remove an entry from the local or meetings directories.

1. Access the directory by pressing the  button from the main screen.
2. Select either the **Local** or **Meetings** directory.
3. Select the entry you wish to remove.
4. **Black Remote Control:**
Press the  button.
Silver Remote Control:
Press the  button.
5. Select **Remove** and press **OK**.
6. Select **Yes** and press **OK**.

Editing an Entry in the Local or Meetings Directories

You can edit an entry in the local or meetings directories.

1. Select the entry you wish to edit.
2. **Black Remote Control:**
Press the  button.
Silver Remote Control:
Press the  button.
3. Select **Edit** from the menu, and press **OK**.
4. Modify values in the **Edit Directory Entry** or **Edit Meeting Entry** dialog.
 - a. Press **OK** to select a field you wish to modify.
Note: If necessary, press the  button to change the method of text entry for text fields.
 - b. After completing your changes, press **OK** to exit the field.
5. Using the arrow keys, select **Save Changes** and press **OK**.

Troubleshooting

The following sections describe symptoms, possible causes, and potential solutions for common problems you may encounter with your LifeSize system.

When experiencing a problem, visually inspect the unit. Ensure the system has not been exposed to water or heat sources or appears physically damaged.

Improperly connected or loose cables are common causes of problems with hardware units. When investigating a system problem, first inspect all the external controls and cable connections. Ensure that connections are correct and secure, and that nothing is obstructing the cables. Contact your administrator for information about proper cabling.

Adjusting Room Lighting

You can assist the system to maintain the best possible image quality by altering the environmental lighting and background colors of your environment. If light levels are too low you may consider adding artificial lighting. Indirect light from shaded sources or reflected light from pale walls often produces excellent results.

Avoid the following:

- direct sunlight on the subject matter, the background, or the camera lens which creates harsh contrasts
- direct illumination of the subject matter and camera lens
- colored lighting
- harsh side lighting or strong light from above

You can also improve dim scenes by adjusting the camera brightness. Refer to “Adjusting Camera Brightness” on page 39.

Camera Issues

If you are unable to pan, tilt, or zoom a camera that has these capabilities, ensure the remote control contains three AAA batteries that are in good working condition. Also verify that no objects are obstructing the sensor on the front of the camera and that the LED on front of the camera flashes bright blue when you use the remote control to perform a task.

If no video displays from the camera, ensure the camera is connected to the LifeSize system with a camera cable to the appropriate camera input or contact your administrator. Also ensure that the primary input is set to the high definition camera as described in “Changing Video Inputs” on page 27.

Verify that the blue LED on the front of the camera is lit, indicating that power is active, and reboot the system if necessary to verify that the camera turns on. To reboot the system, refer to “Power and Connectivity Issues” on page 42.

Using Camera Diagnostic Preferences

You can use the camera diagnostic preferences in **User Preferences : Diagnostics** to adjust camera brightness and white balance and correct for some types of flicker that may appear in the video. Diagnostic camera preferences for camera brightness and white balance are available only if the selected camera is connected to the codec and **Ready** appears as the status for the camera on the **System Information** page.

Adjusting Camera Brightness

Camera brightness refers to the amount of light received through the lens of the camera. You can improve dim scenes by adjusting room lighting and manually adjusting the camera brightness. To adjust camera brightness, set the **HD Camera Brightness** preference in **User Preferences : Diagnostics : High Definition Camera**.

Adjusting Camera White Balance

Camera white balance refers to how a camera references the color white, which is a mixture of all colors. Adjust the white balance when video color appears to be unbalanced. White balance is affected by the type of light source. To adjust the camera white balance adjust the **HD Camera White Balance** preference in **User Preferences : Diagnostics : High Definition Camera**.


Adjusting the Camera Anti-Flicker Preference

Lights powered by a 50 Hz power source can produce a flicker that the camera captures and transmits to the system. If you are using lights powered by a 50 Hz power source and observe a flicker in the video displayed in your system, select the *50 Hz* option in **User Preferences : Diagnostics : High Definition Camera : Camera Anti-Flicker**. The default option is *Auto*.

Note: The option chosen for this preference applies to all cameras connected to the system.

Some camera exposure settings designed to be used in rooms lit by sunlight may result in a flicker. To remove the flicker, increase the **HD Camera Brightness** setting in **User Preferences : Diagnostics : High Definition Camera**.

VGA and DVI-I Input Issues

You can adjust the horizontal and vertical positioning, and brightness and contrast of VGA input (or DVI-I input on systems that support a DVI-I connector) from a device connected to the VGA or DVI-I input  on the LifeSize codec. Typically, this input device is a laptop or personal computer that is used to send data during a presentation (for example a spread sheet or a slide show). You can also perform coarse or fine tuning of the clock frequency, and adjust the percentage of scaling so the image best fits your display. To adjust VGA input settings on systems with a VGA input connector, access **User Preferences : Diagnostics : VGA Input**. To adjust DVI-I input settings on systems with a DVI-I input connector, access **User Preferences : Diagnostics : DVI-I Input**.

Display Issues

The following issues are related to the user interface or the display.

Display Failures

If data does not appear on the display, ensure cables are properly connected on the display and that the display cable is connected to the Display 1 output on the back panel of the codec. Also ensure you have selected the correct input. Refer to “Changing Video Inputs” on page 27 for more information.

If the video image and user interface appear washed out or too bright, examine the input settings of your HDTV to make sure the HDTV is displaying the appropriate resolution. Some HDTVs (particularly plasma displays) allow you to configure the native resolution of the input device from the HDTV administration interface.

Poor Quality Display

If you have poor quality or unreadable data on the phone display, adjust the **User Preferences : Appearance : LCD Contrast** setting. LifeSize recommends using the default setting (6).

If the colors on the display appear incorrect, verify that the display cable is properly connected to the display.

Missing Input

If you have not connected all possible video inputs, the input selection dialog displays a black image by default. Connect the necessary input or choose a different input as described in “Changing Video Inputs” on page 27.



Poor Quality Far End Video

During a call, the LifeSize system automatically selects the best video algorithm based on the video source and capabilities of the remote system. If you experience poor motion handling or visible tiling in the far end picture during a video call, contact your administrator.

Audio Issues

A LifeSize system automatically selects the best audio algorithm based on the call rate and the capabilities of the remote system. The following issues are related to the audio quality.

Absent Dial Tone

If you do not receive a dial tone after pressing the  or  key on LifeSize Phone to initiate a call, ensure the line out is securely connected.

An absent dial tone may also result from an unavailable analog phone line connection. If you are connecting with PSTN, ensure the analog phone connection is secure and that it is connected to an active phone line jack.

Problematic Sound Quality

The LEDs on the LifeSize Phone flash blue to indicate an incoming call. If you are unable to hear the phone ring when an incoming call arrives, adjust the volume using the up and down volume key. If you still experience audio problems, adjust the **Ring Tone Volume** preference in **User Preferences : Audio**.

Muffled audio reception from the far side may be caused by highly reverberant rooms. If you are experiencing poor audio reception, add more sound absorbency to the room and speak in close proximity to the phone or microphone.

Degradation in the audio quality can also be caused by faulty microphones or dust and debris on the microphones. Do not use any kind of liquid or aerosol cleaner on LifeSize devices that include microphones. A soft, slightly damp cloth should be sufficient to clean the top surface of the units if necessary.

When using an external microphone, do not place the microphone less than 5 feet away from the loudspeaker. Also, ensure the external microphone gain is not set too high or distortion or an echo may occur.

Distorted Audio

Ensure that speakers are not obscured or damaged at either end of the call. Do not stack items on top of the phone. Ensure both ends are not muted. Verify that the audio out cables are properly connected to the display and that any external speaker systems are powered and configured correctly. If an external speaker system has its own volume control, adjust the volume to near maximum (in the range from 7-10) on the LifeSize audio output and adjust the volume control on the external speaker system for the best results.

Power and Connectivity Issues

If a call does not successfully connect, verify that you have dialed a working number and that the far end destination is powered on and available. Verify that the network is ready and available. Network status is indicated at all times in the status bar. If the LifeSize system is connected to the local network, a green network status icon appears. A yellow or red network status icon indicates a problem with the network connection. Refer to “The Main Screen” on page 7 for a visual depiction and description of the network status icons.

You may need to reboot a system that is not responding to commands from the remote control. To reboot the system, access **User Preferences : Diagnostics : System Reboot**.